

**PIKE COUNTY GENERATOR, INC**

**880 ROUTE 6**

**SHOHOLA, PA 18458**

**570-409-6555**

**F:570-409-3289**

**PIKEGEN@PTD.NET**

**SHUTDOWN PROCEDURE WHILE RUNNING UNDER UTILITY LOSS:**

- TURN OFF ALL MAJOR LOADS INSIDE HOME (EX- TURN HEAT OFF, SUMP PUMPS, ETC)
- **LOCATE** AND **TURN OFF** MAIN BREAKER AT **GENERATOR** (SIDE OF ENCLOSURE BEHIND GRAY DOOR **OR** UNDER ENCLOSURE LID RIGHT SIDE NEAR GENERATOR CONTROLLER)
- OPEN GENERATOR LID
- PRESS RED **OFF** BUTTON
- CHECK GENERATOR OIL LEVEL WITH DIPSTICK
- ADD TO **FILL LINE ONLY** – ALL STAND BY UNITS TAKE **5W/30 - FULL SYNTHETIC**
- CHECK AIR FILTER (LOCATED INSIDE GENERATOR INSIDE BLACK BOX) TO MAKE SURE NO MOISTURE/SNOW/WATER/OIL IS PRESENT

**RESTART GENERATOR WHILE UNDER UTILITY LOSS:**

- PRESS GREEN **AUTO** BUTTON- GENERATOR WILL TURN OVER AND START
- LET GENERATOR WARM FOR **1-2 MINUTES**
- TURN THE MAIN BREAKER AT THE GENERATOR BACK ON
- CLOSE AND LOCK GENERATOR LID

**NOTE: NEVER SHUT DOWN OPERATING GENERATOR WITHOUT TURNING MAIN BREAKER AT GENERATOR OFF FIRST**

**\*\*WHEN THERE IS A SIGNIFICANT AMOUNT OF SNOW FALLING, YOU MUST CLEAR SNOW AWAY FROM ALL GENERATOR SIDES**

**GENERATOR INDICATOR LIGHTS**

**GREEN**- READY TO RUN FOR UTILITY LOSS, UNIT OPERATING PROPERLY

**YELLOW**- UNIT NEEDS YEARLY MAINTENANCE

**RED**- NOT OPERATIONAL-CONTACT OFFICE IMMEDIATELY

